


Safety and Installation Instructions for Computer Credenza Pop-up

Important: Read carefully before operating.

Installing your computer in this unit

1. This unit is fitted with two electrical safety switches. One is at the back of the keyboard pullout, the second is to the left of the keyboard drop down drawer front.


Electrical Ball
switches

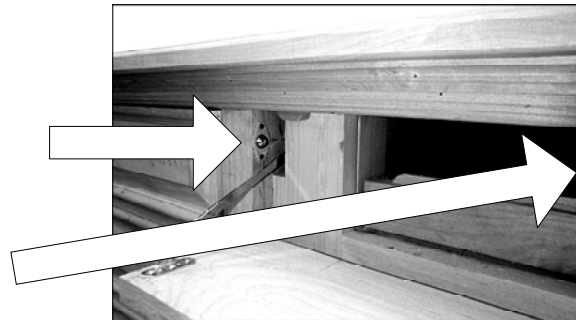

In order for the motor to operate, the keyboard pullout must be pushed all the way to the back and the false drawer front must be closed.

Plug the power supply into the mains and press the remote control once. The unit should raise up to the open position. **Disconnect the power supply now.**

*As the keyboard pullout is likely to come loose in shipping and cause the pop-up not to operate, we have secured it with a screw. The center back must first be removed by removing all Philips head screws. Then the keyboard pullout locking screw must be removed. **Disconnect the power supply before removing back.***

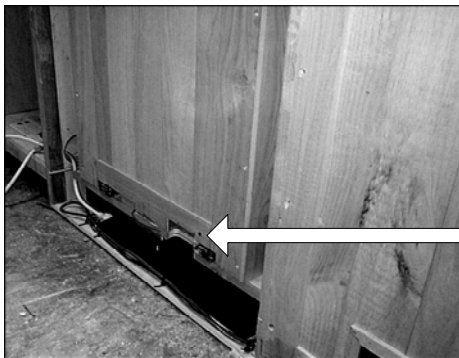


Keyboard Pullout
locking Screw
(Must be removed)

BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE


2. You are now ready to start installing your computer equipment. The keyboard, mouse and monitor power supply cords are dropped down the back of the popup section and threaded into the black cord raceway. *(Your cords may not be long enough to reach the tower. It may be necessary to purchase extensions from your local computer dealer)* **The wires must be properly enclosed in the black plastic raceway, so as not to get crushed by the gears when the unit travels up and down.**

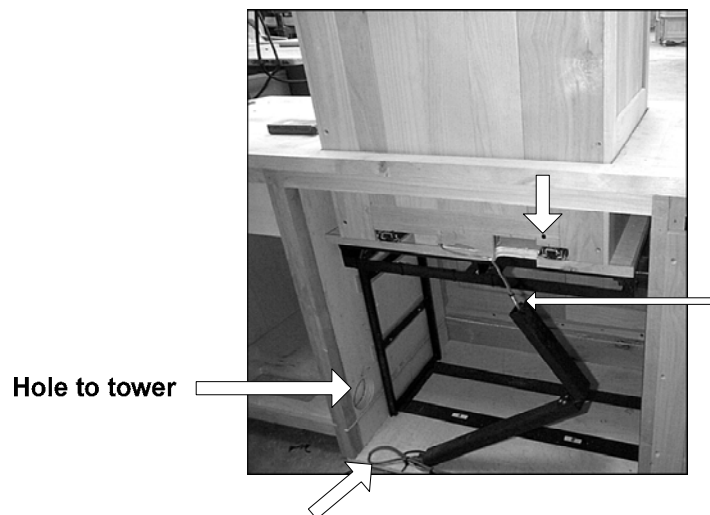

Keyboard, mouse and monitor power supply cords must be threaded through this black plastic raceway. Then trough the hole to the tower.

The printer cord and printer power cord must be laid across the back, well clear of the gears. Do not coil up excess cable in the center section.

3. The printer cable and the printer power supply cable can be run along the back of the center section. Be sure no excess cable be stored in the center section. Extra printer cable should be stored under the printer pullout (Right facing) where the black box is located.

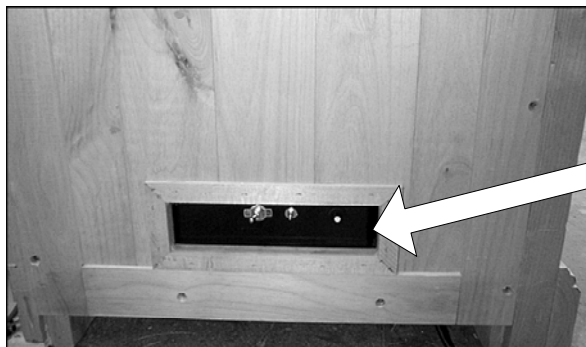

Black Box with manual override switch

BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE

- 4.** Access to the black box is available without removing the right facing section of the back. When the left hand switch is in the left position the lift is operated with the remote control. When the left hand switch is in the right position the lift is operated manually with the right hand switch. (Left will make the lift go up and right will make the lift go down)

- 5.** Once all cords are secured out of the way of the lift mechanism, the back may be replaced and the unit slid up against the wall. The power to the unit may now be plugged back in.

BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE

Safety Instructions & Features

CHILDREN SHOULD NOT OPERATE THIS UNIT

Should you accidentally trap your hand in unit as it travels down, the front of the top is hinged as shown. **Always keep clear of unit while it travels up and down**



The top is only held on with dowels so it may lift if anything should get caught under it. As wood is constantly shrinking and contracting, these dowels may become tight and the lid may not remove easily. **Do not place any heavy objects on top of unit as it will hinder the top from lifting should anything get trapped.**

