

BAUSMAN & COMPANY, INC.

FINE BENCH MADE FURNITURE


6067 Cabinet Knock Down Guide





Step 1: Carefully remove the crown (Item A) upwards from the main assembly. **Step 2:** Using a Phillips head screwdriver (not provided), remove all screws at the back side of the armoire. Remove the back panel (Item B).





Step 3: Remove the drawers by pressing and holding the black plastic clip located on both sides of the drawer. **Step 4:** Remove screws and slide the dividers (Item C) through the back of the cabinet.

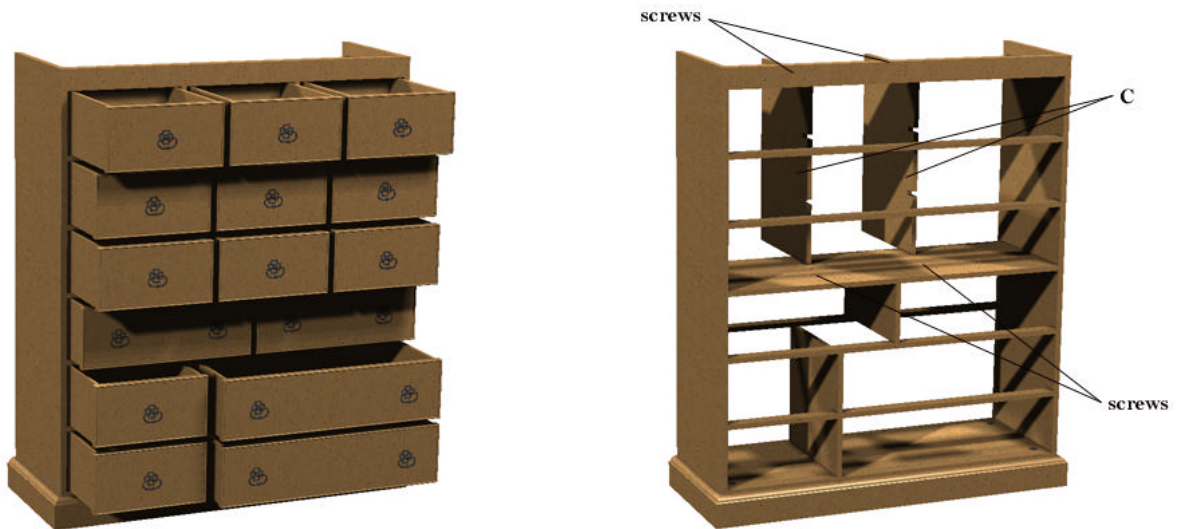

Step 5: Remove the screws at the specified locations and detach the apron (Item D) from the main assembly. **Step 6:** Remove the screws that hold the divider (Item E) to the main assembly and slide it through the back of the cabinet.

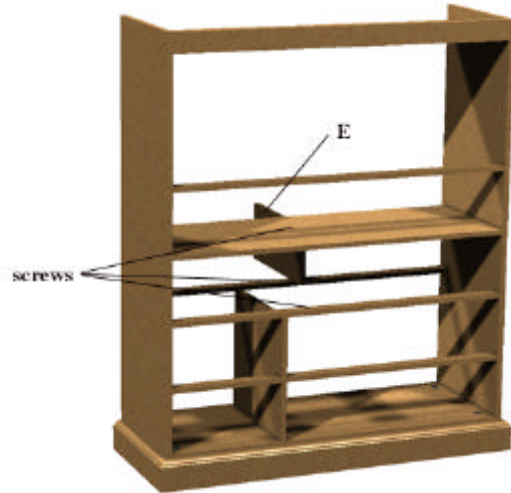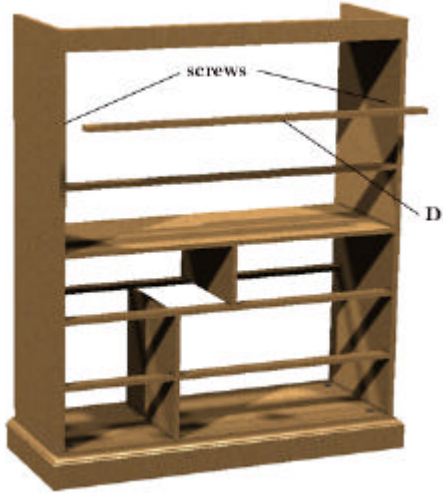

Step 7: Repeat step 5. **Step 8:** Repeat step 6.

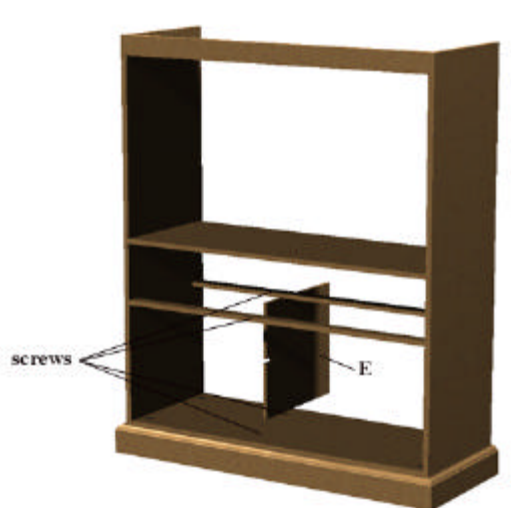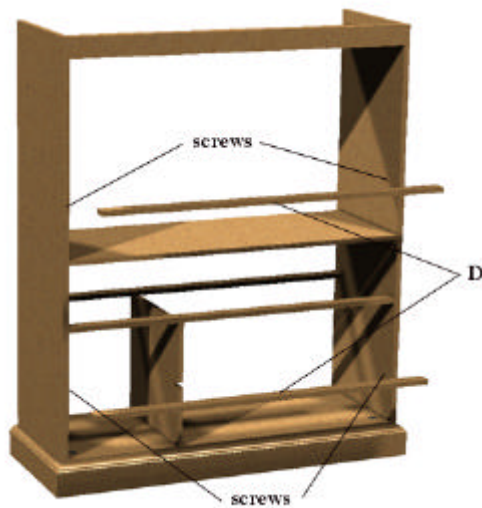

Step 9: Repeat step 4. **Step 10:** Using an Allen key (Item F), turn the universal connectors (Item G) counter-clockwise to release the side panels (Item H).

